 
 


	Airbag		Gas generator		Seat belt pretensioner		SRS control unit		
	Low voltage battery		Gas strut / pre-loaded spring		High resistance zone		Area requiring special attention		Fuel tank

	ID No. HNXG-ENRS-EN01	Version No. 01	Version Date. 10/2025	Page 1/4
--	--------------------------	-------------------	--------------------------	-------------

1. Identification / recognition

GRANDIS



2. Immobilization / stabilization / lifting

Immobilization



Engine stop



3. Disable direct hazards / safety regulations

12 Volt battery




- Engine stop
- Disconnect the (-) 12V batteries




ID No.	Version No.	Version Date.	Page
HNXG-ENRS-EN01	01	10/2025	2/4



4. Access to the occupants

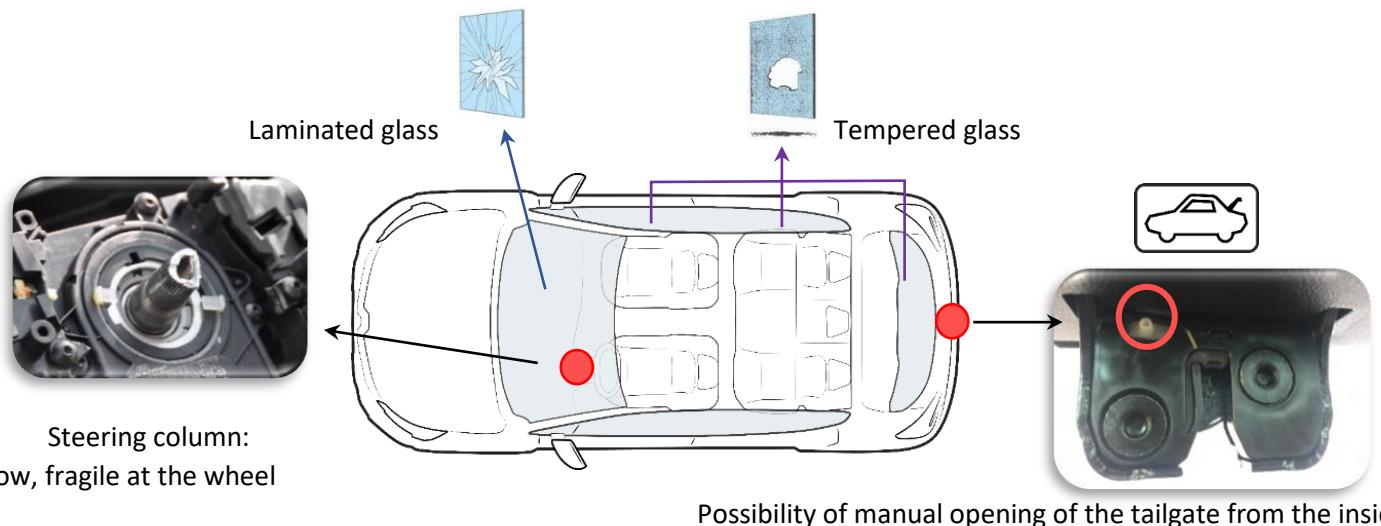

POSSIBLE SEAT MOVEMENTS

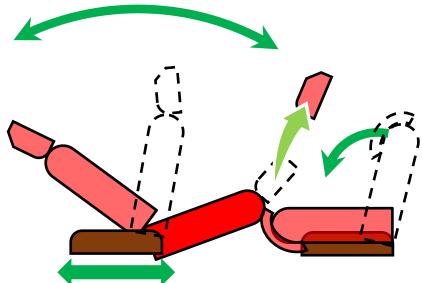

REINFORCED STEELS

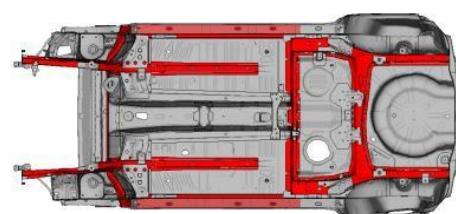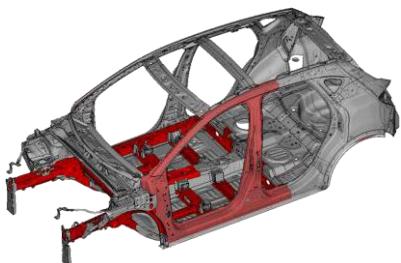

5. Stored energy / liquids / gases / solids

	48 L			
--	------	--	--	--


	ID No. HNXG-ENRS-EN01	Version No. 01	Version Date. 10/2025	Page 3/4
--	--------------------------	-------------------	--------------------------	-------------

6. In case of fire

GAS STRUTS



Risk of missile effect from gas springs

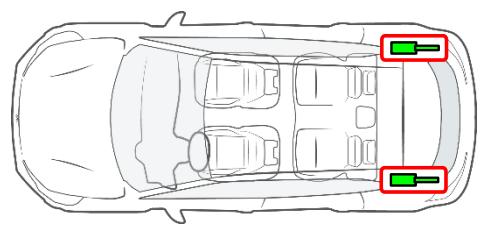

10. Explanation of pictograms used

	Vehicle running on Group 2 liquid fuel				
	Move the hands-free key away		hood		boot
	Flammable		Dangerous for human health		Environmental hazard

ID No.	Version No.	Version Date.	Page
HNXG-ENRS-EN01	01	10/2025	4/4