

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention		
	Battery low voltage		Ultra-capacitor, low-voltage		Fuel tank		Gas tank		Safety valve
	Battery pack, high-voltage		High voltage power cable		High voltage component		Fuse box disabling high voltage		High voltage ultra-capacitor


	ID No.	Version No.	Version Date.	Page
	VBXG-ENRS-EN01	01	07/2023	1/4

1. Identification / recognition




2. Immobilisation / stabilisation / lifting

Engine shutdown

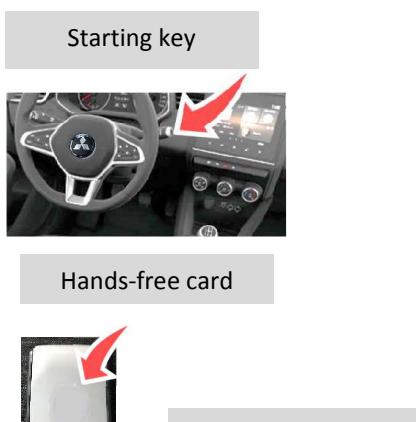

Parking position

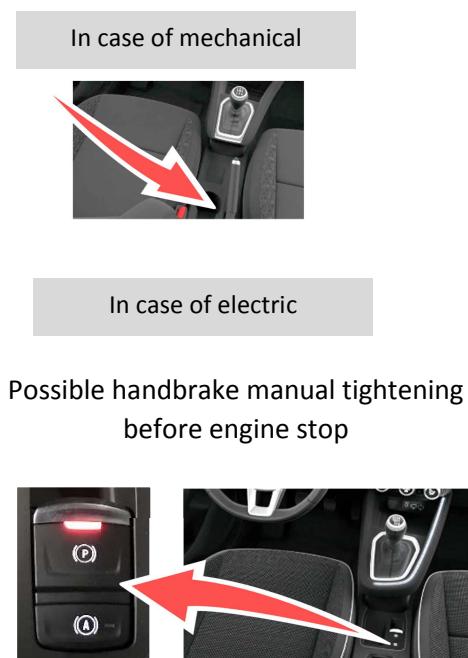

Automatic



Move the lever to the "P" position
(Position forward)

Hands-free card



3. Disable direct hazards / safety regulations

ENGINE BONNET CATCH ACCESS



Release lever




Engine bonnet safety release lever

ID No.	Version No.	Version Date.	Page
VBXG-ENRS-EN01	01	07/2023	2/4

12 Volts Battery

 
Engine compartment



- 1- Switch off the ignition
- 2- Disconnect the negative terminal (-)

4. Access to the occupants

HARDENED STEEL HIGH ELASTIC LIMIT (HEL)

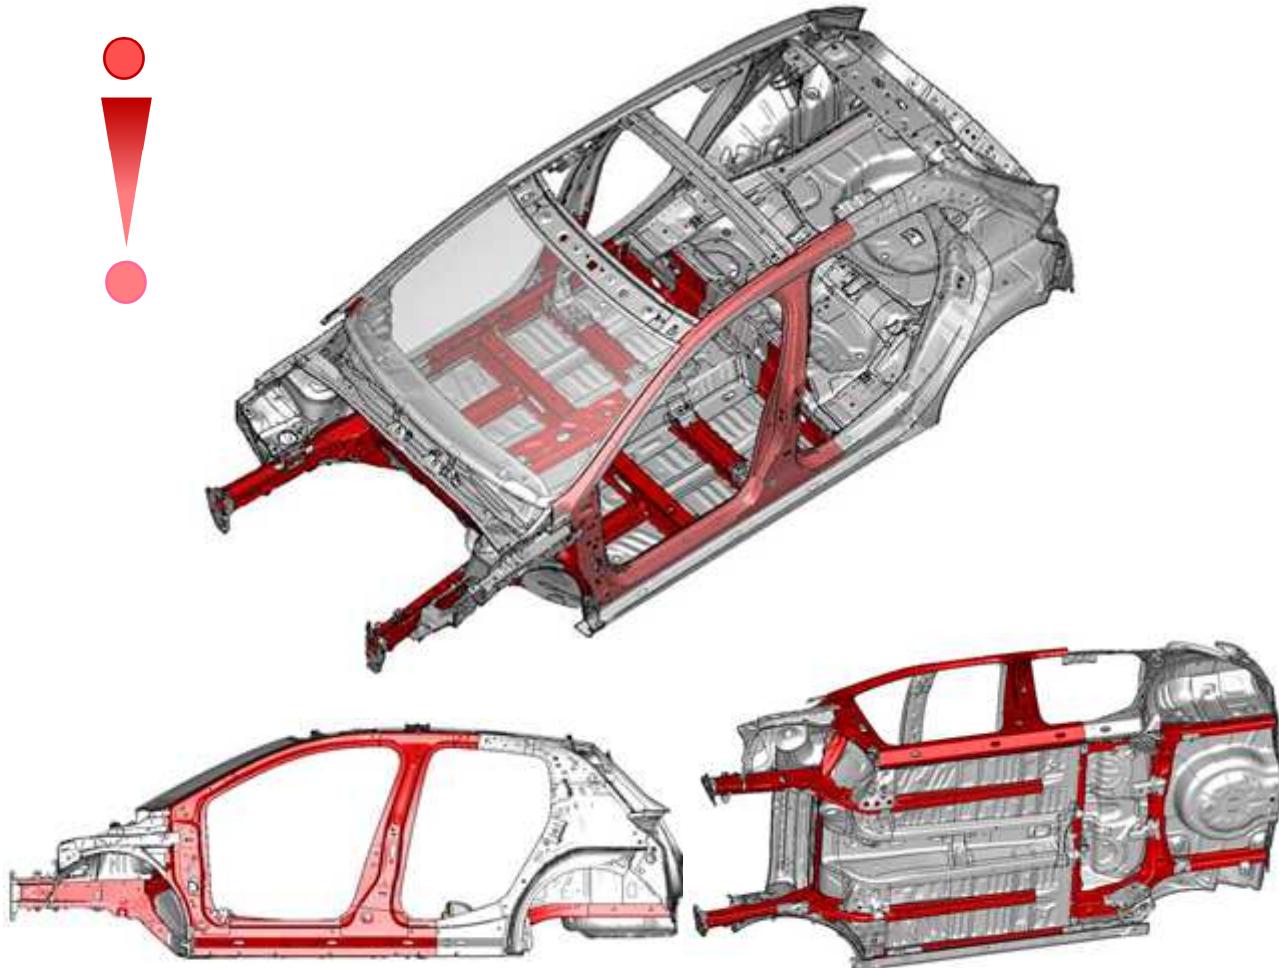

STEERING COLUMN



Steering column hollow and breakable with tools

ID No.	Version No.	Version Date.	Page
VBXG-ENRS-EN01	01	07/2023	3/4

6. In case of fire

TAILGATE GAS STRUTS

 


Risk of missile effect of tailgate gas struts

10. Explanation of pictograms used



Vehicle on fuel of liquid group 2



Remove smart key

	ID No.	Version No.	Version Date.	Page
	VBXG-ENRS-EN01	01	07/2023	4/4